


Cargo Lid™ Lock

What's Included

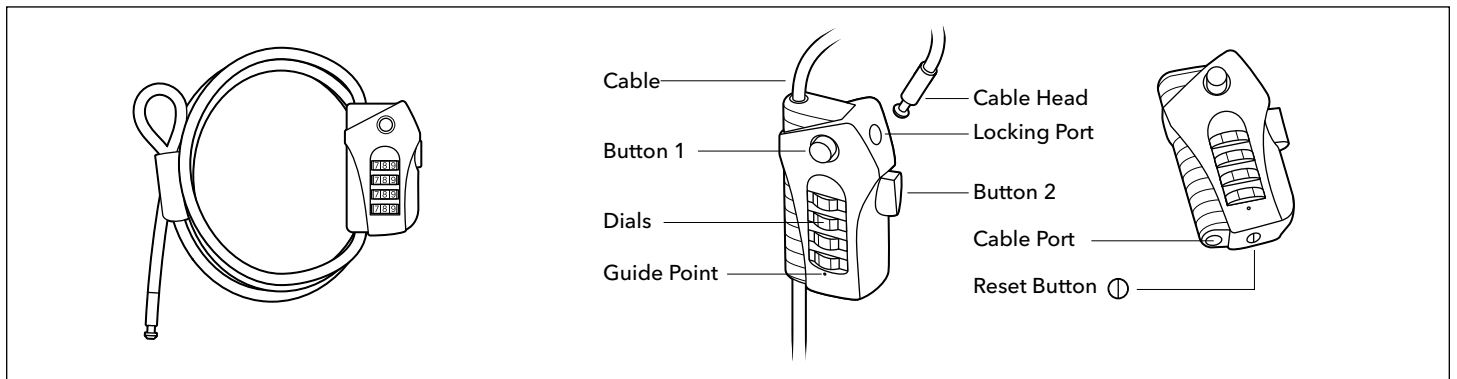

To Unlock

1. Turn the Dials to the preset opening combination, 0-0-0-0, aligning the numbers with the Guide Point.
2. Press Button 1 and pull the Cable out from the Locking Port.

To Set Your Own Combination


Tool required: Flat head screwdriver (not included)

1. Turn the Dials to the preset opening combination, 0-0-0-0. Align the numbers with the Guide Point.
2. Press Button 2 until you hear a click.
3. Push in and rotate the Reset Button 90 degrees counter-clockwise with a small flat head screwdriver. ↺
4. Turn the Dials to your own desired combination.
5. Rotate the Reset Button 90 degrees clockwise back to its original position. ↻
6. Press Button 1 to pop Button 2 out.
7. Record your combination and keep it in a safe place for future reference. Your lock is now ready to use with its new combination.

To Lock

1. Push the Cable Head into the Locking Port until a click is heard.
2. Firmly press Button 2 until a click is heard.
3. Scramble the Dials randomly before leaving your bike.

How to Use with the Cargo Lid The Cargo Lid is an additional cover that is included with the Storm Box

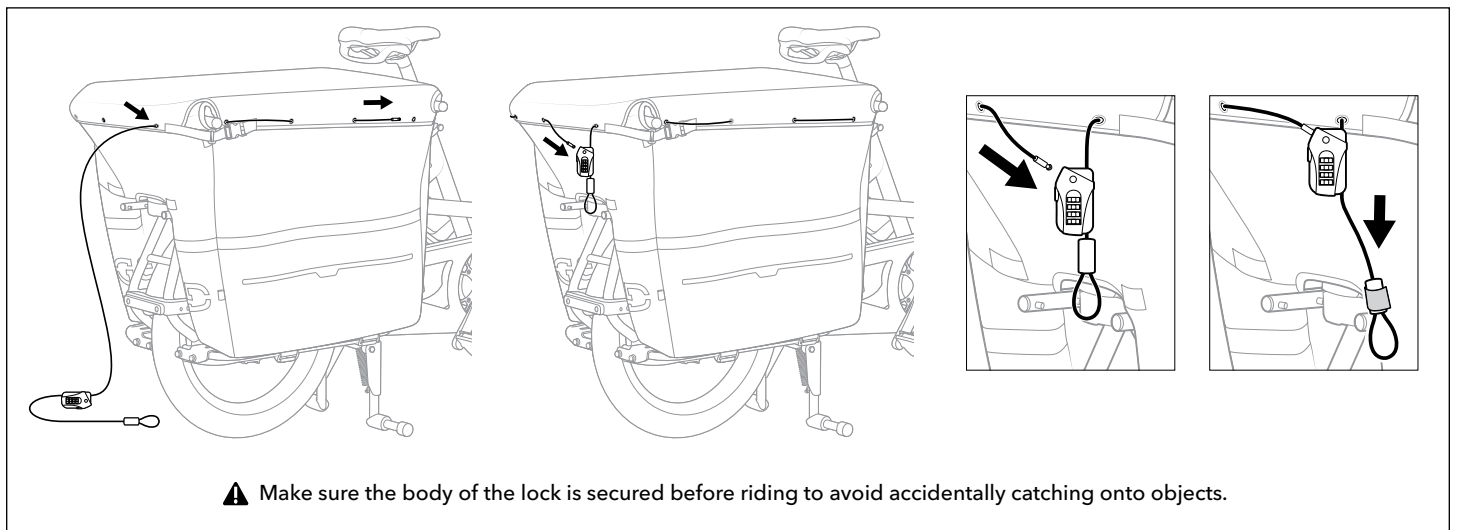

LIMITED PRODUCT WARRANTY INFORMATION: This Product comes with a ONE (1) YEAR Limited Warranty from the date of retail purchase by the original end-user. If a material or workmanship defect arises and a valid claim is received within the Warranty Period, this Product will be replaced. Mobility Holdings cannot be held liable for damages to personal property due to misuse or improper care and maintenance. This Product Warranty does not, under any circumstance, cover the replacement or cost of any third party product used with or connected to the Product.

Tern, the Tern Werd (logotype), the Tern Berd (device), Cargo Lid, and Storm Box used alone or in combination are trade names, trade devices or registered trademarks of Mobility Holdings, Ltd.

© 2020 Mobility Holdings, Ltd.

   @ternbicycles